

Elea[®]



Trendway >



1

Unlock your chair

TILT LOCK:

Left Lever

The mechanism has three tilt locking locations (upright, moderate recline, and full recline). To disengage tilt lock, press lever down then recline slightly.



2

Adjust the height

SEAT HEIGHT:

Right Lever

To raise, lift lever up while no weight is on the chair. To lower, lift lever up while seated.



3

Adjust the tilt

TILT TENSION:

Right Crank Handle

The tilt tension crank telescopes outward to allow for easier access and will automatically return once finished. To increase tilt tension, turn crank clockwise. To decrease tension, turn crank counterclockwise.

Please note: It may take 5 revolutions to feel a change. Don't be shy, give the crank a few turns to find your comfort level!

