

U-Shape Acrylic Screens

Post Style Bracket



Trendway>

Easily convert your open plan office to a more secluded environment with Trendway's new acrylic screens. There are many options to choose from to quickly retrofit your space when it's time to get your team back to the office - safely.

U-Shape Screens | Post Style Bracket | Adhesive or Screw Mount

With a U-shape design for more complete coverage, these can be screw or adhesive mounted onto the work surface. Available in heights from 24" to 36", Depths of 24" or 30" and widths from 36" to 72", these screens easily retrofit most office layouts. Choose from frosted or clear for the right level of privacy. Optional 2" raised gap for wire management or 4" access slot can also be selected.





2" gap option for wire management



4" access slot option



4" access slot option



U-Shape Screen | Post Style Bracket | Adhesive or Screw Mount

Dimensions			Insert Material		Catalog #
Width	Depth	Height	Clear Acrylic	Frosted Acrylic	
36" 42" 48" 54" 60" 66" 72"	24"	24"	\$1,280 \$1,285 \$1,290 \$1,305 \$1,315 \$1,465 \$1,475	\$1,425 \$1,430 \$1,435 \$1,679 \$1,685 \$1,690 \$1,695	SCNSMPU362424 SCNSMPU422424 SCNSMPU482424 SCNSMPU542424 SCNSMPU602424 SCNSMPU662424 SCNSMPU722424
36" 42" 48" 54" 60" 66" 72"	30"	24"	\$1,280 \$1,285 \$1,290 \$1,305 \$1,315 \$1,465 \$1,475	\$1,500 \$1,505 \$1,510 \$1,755 \$1,760 \$1,765 \$1,770	SCNSMPU363024 SCNSMPU423024 SCNSMPU483024 SCNSMPU543024 SCNSMPU603024 SCNSMPU663024 SCNSMPU723024
36" 42" 48" 54" 60" 66" 72"	24"	30"	\$1,280 \$1,285 \$1,290 \$1,358 \$1,370 \$1,465 \$1,475	\$1,580 \$1,585 \$1,590 \$2,215 \$2,220 \$2,225 \$2,230	SCNSMPU362430 SCNSMPU422430 SCNSMPU482430 SCNSMPU542430 SCNSMPU602430 SCNSMPU662430 SCNSMPU722430
36" 42" 48" 54" 60" 66" 72"	30"	30"	\$1,332 \$1,340 \$1,350 \$1,412 \$1,425 \$1,518 \$1,530	\$1,885 \$1,890 \$1,895 \$2,525 \$2,530 \$2,535 \$2,540	SCNSMPU363030 SCNSMPU423030 SCNSMPU483030 SCNSMPU543030 SCNSMPU603030 SCNSMPU663030 SCNSMPU723030
36" 42" 48" 54" 60" 66" 72"	24"	36"	\$1,598 \$1,605 \$1,610 \$1,622 \$1,635 \$1,938 \$1,950	\$1,883 \$1,890 \$1,895 \$2,370 \$2,375 \$2,380 \$2,385	SCNSMPU362436 SCNSMPU422436 SCNSMPU482436 SCNSMPU542436 SCNSMPU602436 SCNSMPU662436 SCNSMPU662436
36" 42" 48" 54" 60" 66" 72"	30"	36"	\$1,598 \$1,605 \$1,610 \$1,622 \$1,635 \$1,938 \$1,950	\$2,037 \$2,040 \$2,045 \$2,525 \$2,530 \$2,535 \$2,540	SCNSMPU363036 SCNSMPU423036 SCNSMPU483036 SCNSMPU543036 SCNSMPU603036 SCNSMPU663036 SCNSMPU723036








Available:

- Full screen, 2" gap for wire management, or 4" access slot
- Clear or Frosted acrylic
- Standard or Premium (+\$12) color bracket paint finishes




Acrylic Screen Dimensions | Post Style Bracket

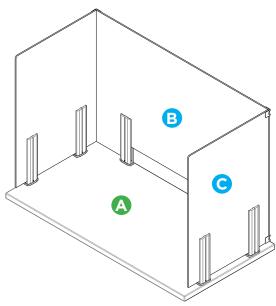



Model SCNSMPU482430 48"Wx24"Dx30"H

Work surface needs to be a minimum of 45.75"W x 21.43"D to fit this screen model.

All screen dimensions are identical between adhesive and screw mounting methods.

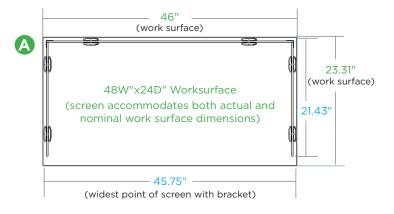

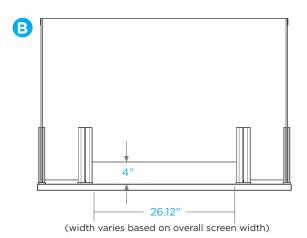

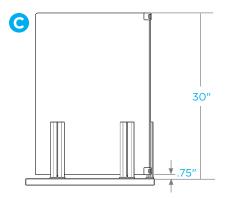

Cleaning Instructions for Acrylic Screen

First time setup: Do not attempt to clean immediately after removing the protective paper because the static electricity will attract dust and particles. Wait a day for the static to dissipate before cleaning.

Step 1

Begin by removing excess dust or dirt from the surface of the acrylic with an air hose or blow dryer set to its coolest setting (never heat acrylic). Hold the blow dryer at a 45-degree angle several inches away from the acrylic and run side-to-side down the surface. Wipe any remaining dust with a soft, lint-free cotton microfiber cloth.

Step 2

Once excess grime has been blown away, spray a nonabrasive acrylic cleaner, such as Brillianize or Novus No. 1 onto a one- or two-foot-square section of acrylic. (For an on-hand alternative, a solution of mild dish soap and water works well too.). Never use abrasive cleaners or anything containing Ammonia such as Formula 409°, Windex° or Fantastik°. Ammonia will cause your acrylic to get cloudy and you can't reverse the effects. Bleach solutions and disinfectants are not recommended and can cause damage to the acrylic.

Once the cleaner has been applied, use a soft, lint-free cotton microfiber cloth to gently wipe the surface down, again being careful to make contact only with the portion of the surface that already has cleaner on it. Continue applying the cleaner and wiping it off in small sections until you've finished the entire surface. Do not use a paper towel to clean acrylic because it can cause scratching.



